



SAMSUNG

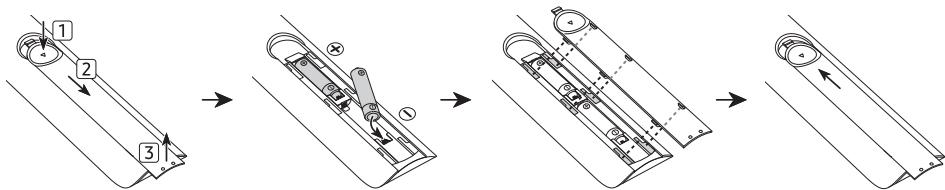

BN68-25132E-00

Кнопки интеллектуального пульта ДУ Стандартный пульт ДУ

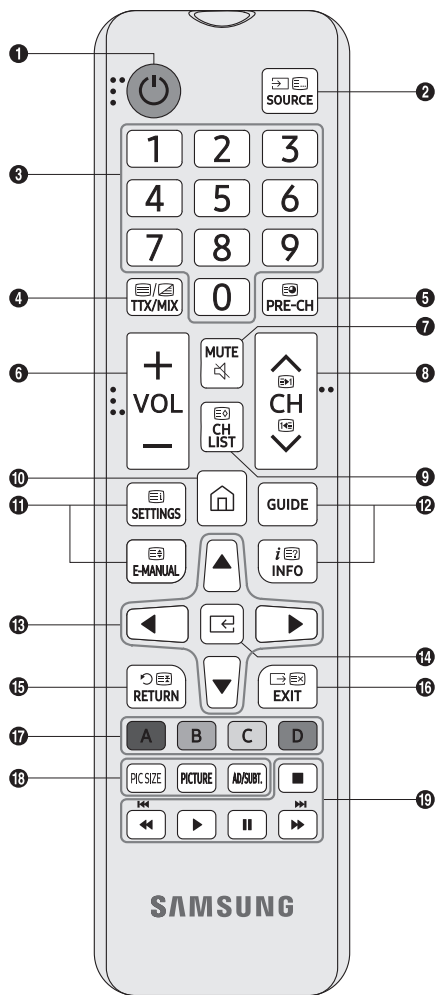

Номер	Описание
1	⏻ (Выключение) Включение и выключение телевизора.
2	Просмотр и выбор доступных источников видеосигнала.
3	Прямой доступ к каналам.
4	Выбор режима Телетекст, Full TTX/Double TTX/Mix/Live TV.
5	Возврат к предыдущему каналу.
6	Регулировка громкости.
7	Включение и выключение звука.
8	Переключение текущего канала.
9	Запуск Список каналов.
10	Нажмите, чтобы перейти на экран Главная.
11, 12	SETTINGS Вызов главного экранного меню. E-MANUAL Вызов экрана Руководство пользователя (e-Manual). Изображения, кнопки и функции пульта могут отличаться в зависимости от модели. GUIDE Отображение экрана Телегид. INFO Отображение информации о текущей программе или о содержимом.
13	Перемещение курсора, выбор элементов экранного меню и изменение значений в нем.
14	⏏ (Выбор) Выбор или запуск выделенного элемента.
15	Возврат к предыдущему меню.
16	Выход из меню.
17	Используйте эти кнопки в соответствии с указаниями, отображающимися на экране телевизора.
18	PIC SIZE Изменение размера изображения. PICTURE Изменение режима изображения. AD/SUBT. Вызов экрана Ссылки доступности.
19	Используйте эти кнопки с определенными функциями. Используйте эти кнопки в соответствии с указаниями, отображающимися на экране телевизора.



- Изображения, кнопки и функции пульта ДУ могут отличаться в зависимости от модели или региона.
- На кнопках пульта Выключение, Канал и Громкость имеются точки шрифта Брайля специально для слабовидящих людей.
- В случае использования пульта дистанционного управления, поставляемого с данным телевизором, для управления другим телевизором некоторые функции могут работать неправильно.

Пульт дистанционного управления не работает.

- Проверьте, мигает ли датчик пульта ДУ в нижней части телевизора при нажатии кнопки ⏻ на пульте ДУ.
 - Если индикатор не мигает, замените батареи в пульте ДУ. Убедитесь, что при установке батарей соблюдена полярность (+/-). Рекомендуется использовать щелочные батареи, которые обеспечивают более длительный срок службы.
- Попробуйте направить пульт дистанционного управления непосредственно на телевизор с расстояния 1,5–1,8 м.

SAMSUNG

About the Buttons on the Standard Remote Control

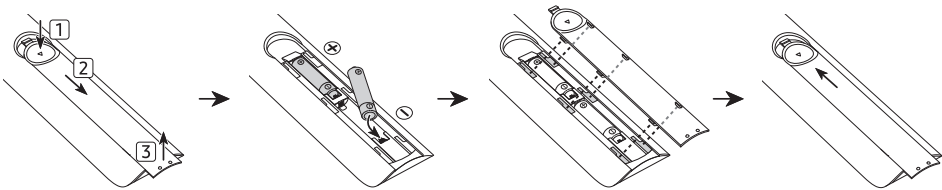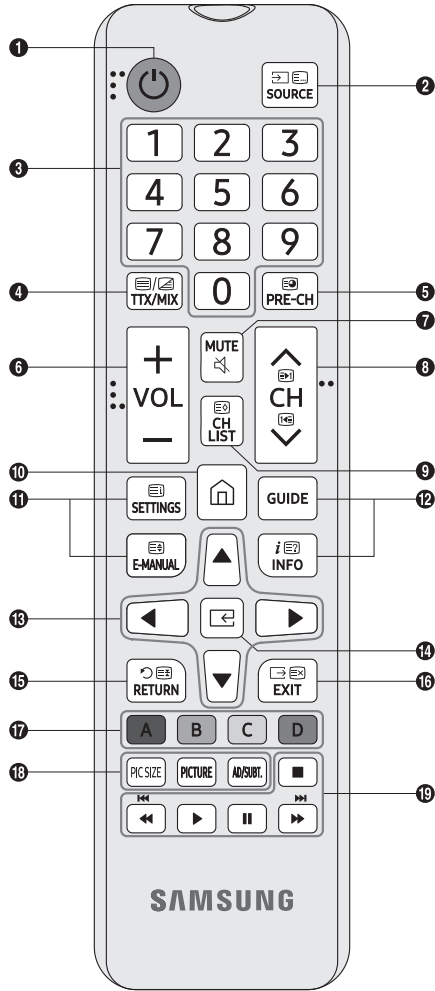

Number	Description
1	(Power) Turns the TV on and off.
2	Displays and selects available video sources.
3	Gives direct access to channels.
4	Alternately selects Teletext mode, Full TTX / Double TTX / Mix / Live TV.
5	Returns to the previous channel.
6	Adjusts the volume.
7	Turns the sound on/off.
8	Changes the current channel.
9	Launches the Channel List.
10	Press to switch to the Home Screen.
11, 12	SETTINGS Displays the main on-screen menu. E-MANUAL Displays the User Guide (e-Manual). The images, buttons, and functions of the remote control may differ depending on the model. GUIDE Displays the Guide screen. INFO Displays information about the current programme or content.
13	Moves the cursor, selects the on-screen menu items, and changes the values seen on the TV's menu.
14	(Select) Selects or runs a focused item.
15	Returns to the previous menu or channel.
16	Exits the menu.
17	Use these buttons according to the directions on the TV screen.
18	PIC SIZE Changes the picture size. PICTURE Changes the picture mode. AD/SUBT. Displays the Accessibility Shortcuts.
19	Use these buttons with specific features. Use these buttons according to the directions on the TV screen.

- The images, buttons, and functions of the remote control may differ depending on the model or geographical area.
- This remote control has Braille points on the Power, Channel, and Volume buttons and can be used by visually impaired persons.
- If you use the remote control that comes with your TV to control another TV, some functions may not operate normally.

The remote control does not work.

- Check if the remote control sensor at the bottom of the TV blinks when you press the button on the remote control.
 - If it does not blink, replace the remote control's batteries. Make sure that the batteries are installed with their poles (+/-) in the correct direction. Alkaline batteries are recommended for longer battery life.
- Try pointing the remote directly at the TV from 1.5-1.8 m away.